



Installation Instructions

1) Insert Device in open end of barrier




2) Remove Barrier from paper backing



3) Twist device while holding barrier tight at cable



4) Remove paper backing from adhesive strip

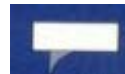

5) Tightly Wrap adhesive strip around cord to create a secure seal



6) To remove, peel off adhesive strip and pull barrier from the base of the device

